

GUH80A Upflow / Horizontal Replacement Parts List 80+ AFUE

| ITEM | DESCRIPTION | 045A3XE | 054A3XE | 072B4XE | 090B4XE | 072C5XE | 090C5XE | 108C5XE | 126D5XE |
|------|--------------------------------|----------|----------|----------|----------|----------|----------|----------|----------|
| 1 | Door Set | 904767 | 904767 | 904768 | 904768 | 904769 | 904769 | 904769 | 904770 |
| 2 | Top Panel | 295911R | 295911R | 295912R | 295912R | 295913R | 295913R | 295913R | 295914R |
| 3 | Collector Pan with gasket | 904805 | 904901 | 904998 | 904807 | 905016 | 904809 | 904810 | 905018 |
| 4 | Inducer Motor | 904999 | 904999 | 904999 | 904999 | 904999 | 904999 | 904999 | 904999 |
| 5 | Inducer Gasket (Not Shown) | 689988 | 689988 | 689988 | 689988 | 689988 | 689988 | 689988 | 689988 |
| 6 | Transformer | 622341 | 622341 | 622341 | 622341 | 622341 | 622341 | 622341 | 622341 |
| 7 | Control Board | 920915 | 920915 | 920915 | 920915 | 920915 | 920915 | 920915 | 920915 |
| 8 | Fuse | 632261 | 632261 | 632261 | 632261 | 632261 | 632261 | 632261 | 632261 |
| 9 | Pressure Switch | 632489 | 632489 | 632489 | 632489 | 632489 | 632488 | 632636 | 632520 |
| 10 | Heat Exchanger | 904779 | 904779 | 904780 | 904781 | 904782 | 904783 | 904868 | 904785 |
| 11 | Main Air Limit | 626614 | 626601 | 626612 | 626613 | 626616 | 626614 | 626614 | 626598 |
| 12 | Burner Assembly | 904819 | 904820 | 904822 | 904824 | 904822 | 904824 | 904826 | 904828 |
| 13 | Ignitor Assembly - Nitride | 921074 | 921074 | 921074 | 921074 | 921074 | 921074 | 921074 | 921074 |
| 14 | Igniter Bracket (Not Shown) | 299261 | 299261 | 299261 | 299261 | 299261 | 299261 | 299261 | 299261 |
| 15 | Inshot Burner | 661134 | 661134 | 661134 | 661134 | 661134 | 661134 | 661134 | 661134 |
| 16 | Manifold, Burner Tube | 664228 | 664228 | 664229 | 664230 | 664229 | 664230 | 664231 | 664232 |
| 17 | Orifice, Main Burner, Nat. Gas | 661049 | 661047 | 661047 | 661047 | 661047 | 661047 | 661047 | 661047 |
| 18 | Flame Sensor | 632484 | 632484 | 632484 | 632484 | 632484 | 632484 | 632484 | 632484 |
| 19 | Gas Valve | 624657 | 624657 | 624657 | 624657 | 624657 | 624657 | 624657 | 624657 |
| 20 | Roll-Out Switch | 626610 | 626610 | 626610 | 626610 | 626610 | 626609 | 626610 | 626610 |
| 21 | Door Switch | 632125 | 632125 | 632125 | 632125 | 632125 | 632125 | 632125 | 632125 |
| 22 | Blower Assembly | 904681 | 904681 | 904682 | 904682 | 904683 | 904683 | 904684 | 904684 |
| 23 | Blower Housing Assembly | 297200R | 297200R | 297207R | 297207R | 297204R | 297204R | 297209R | 297209R |
| 24 | Capacitor | 622545 | 622545 | 622545 | 622545 | 622549 | 622549 | 622549 | 622549 |
| 25 | Motor, Blower | 904857 | 904857 | 904858 | 904858 | 904859 | 904859 | 904860 | 904860 |
| 26 | Wheel, Blower | 667251 | 667251 | 667258 | 667258 | 667207 | 667207 | 667280 | 667280 |
| 27 | Blower Limit | 626611 | 626611 | 626611 | 626611 | 626611 | 626611 | 626611 | 626611 |
| 28 | Repl. Motor Mount Kit | N/A | N/A | 904951 | 904951 | 904980 | 904980 | 904951 | 904951 |
| 29 | Hose, High Temp (Not Shown) | 263967 | 263967 | 263967 | 263967 | 263967 | 263967 | 263967 | 263967 |
| 30 | Set of Wires (Not Shown) | M0036001 | M0036001 | M0036001 | M0036001 | M0036005 | M0036005 | M0036005 | M0036005 |


Please specify Model No., Serial No, and the correct part number(s) when ordering parts from the nearest authorized dealer or service center. **FOR COMPONENT LOCATIONS, SEE PAGE 4.**

GDD80A Downflow Replacement Parts List 80+ AFUE

| ITEM | DESCRIPTION | 054A3XE | 072B4XE | 090B4XE | 108C5XE | 126D5XE |
|------|------------------------------------|----------|----------|----------|----------|----------|
| 1 | Door Set | 904767 | 904768 | 904768 | 904769 | 904770 |
| 2 | Top Panel | 295911R | 295912R | 295912R | 295913R | 295914R |
| 3 | Collector Pan With Gasket | 904901 | 904806 | 904806 | 905017 | 905019 |
| 4 | Inducer Motor | 904999 | 904999 | 904999 | 904999 | 904999 |
| 5 | Inducer Gasket (Not Shown) | 689988 | 689988 | 689988 | 689988 | 689988 |
| 6 | Combustion Tube | 299291 | 299291 | 299291 | 299291 | 299291 |
| 7 | Transformer | 622341 | 622341 | 622341 | 622341 | 622341 |
| 8 | Control Board | 920915 | 920915 | 920915 | 920915 | 920915 |
| 9 | Fuse | 632261 | 632261 | 632261 | 632261 | 632261 |
| 10 | Pressure Switch | 632488 | 632489 | 632489 | 632488 | 632488 |
| 11 | Heat Exchanger | 904779 | 904780 | 904781 | 904868 | 904785 |
| 12 | Main Air Limit | 626601 | 626601 | 626617 | 626617 | 626601 |
| 13 | Burner Assembly | 904820 | 904822 | 904824 | 904826 | 904828 |
| 14 | Ignitor Assembly - Nitride | 921074 | 921074 | 921074 | 921074 | 921074 |
| 15 | Igniter Bracket (Not Shown) | 299261 | 299261 | 299261 | 299261 | 299261 |
| 16 | Inshot Burner | 661134 | 661134 | 661134 | 661134 | 661134 |
| 17 | Manifold, Burner Tube | 664228 | 664229 | 664230 | 664231 | 664232 |
| 18 | Orifice, Main Burner, Natural Gas | 661047 | 661047 | 661047 | 661047 | 661047 |
| 19 | Flame Sensor | 632484 | 632484 | 632484 | 632484 | 632484 |
| 20 | Gas Valve | 624657 | 624657 | 624657 | 624657 | 624657 |
| 21 | Roll-out Switch | 626610 | 626610 | 626610 | 626609 | 626609 |
| 22 | Door Switch | 632125 | 632125 | 632125 | 632125 | 632125 |
| 23 | Blower Assembly | 904681 | 904682 | 904682 | 904684 | 904684 |
| 24 | Blower Housing Assembly | 297200R | 297207R | 297207R | 297209R | 294209R |
| 25 | Capacitor | 622545 | 626545 | 626545 | 622549 | 622549 |
| 26 | Motor, Blower | 904857 | 904858 | 904858 | 904860 | 904860 |
| 27 | Wheel, Blower | 667251 | 667258 | 667258 | 667280 | 667280 |
| 28 | Blower Limit | 626611 | 626611 | 626611 | 626611 | 626611 |
| 29 | Repl. Motor Mount Kit | N/A | 904951 | 904951 | 904951 | 904951 |
| 30 | Hose, High Temperature (Not Shown) | 263967 | 263967 | 263967 | 263967 | 263967 |
| 31 | Set of Wires (Not Shown) | M0036035 | M0036038 | M0036038 | M0036030 | M0036030 |

Please specify Model No., Serial No, and the correct part number(s) when ordering parts from the nearest authorized dealer or service center. **FOR COMPONENT LOCATIONS, SEE PAGE 5.**

GUH80A Upflow / Horizontal Component Location

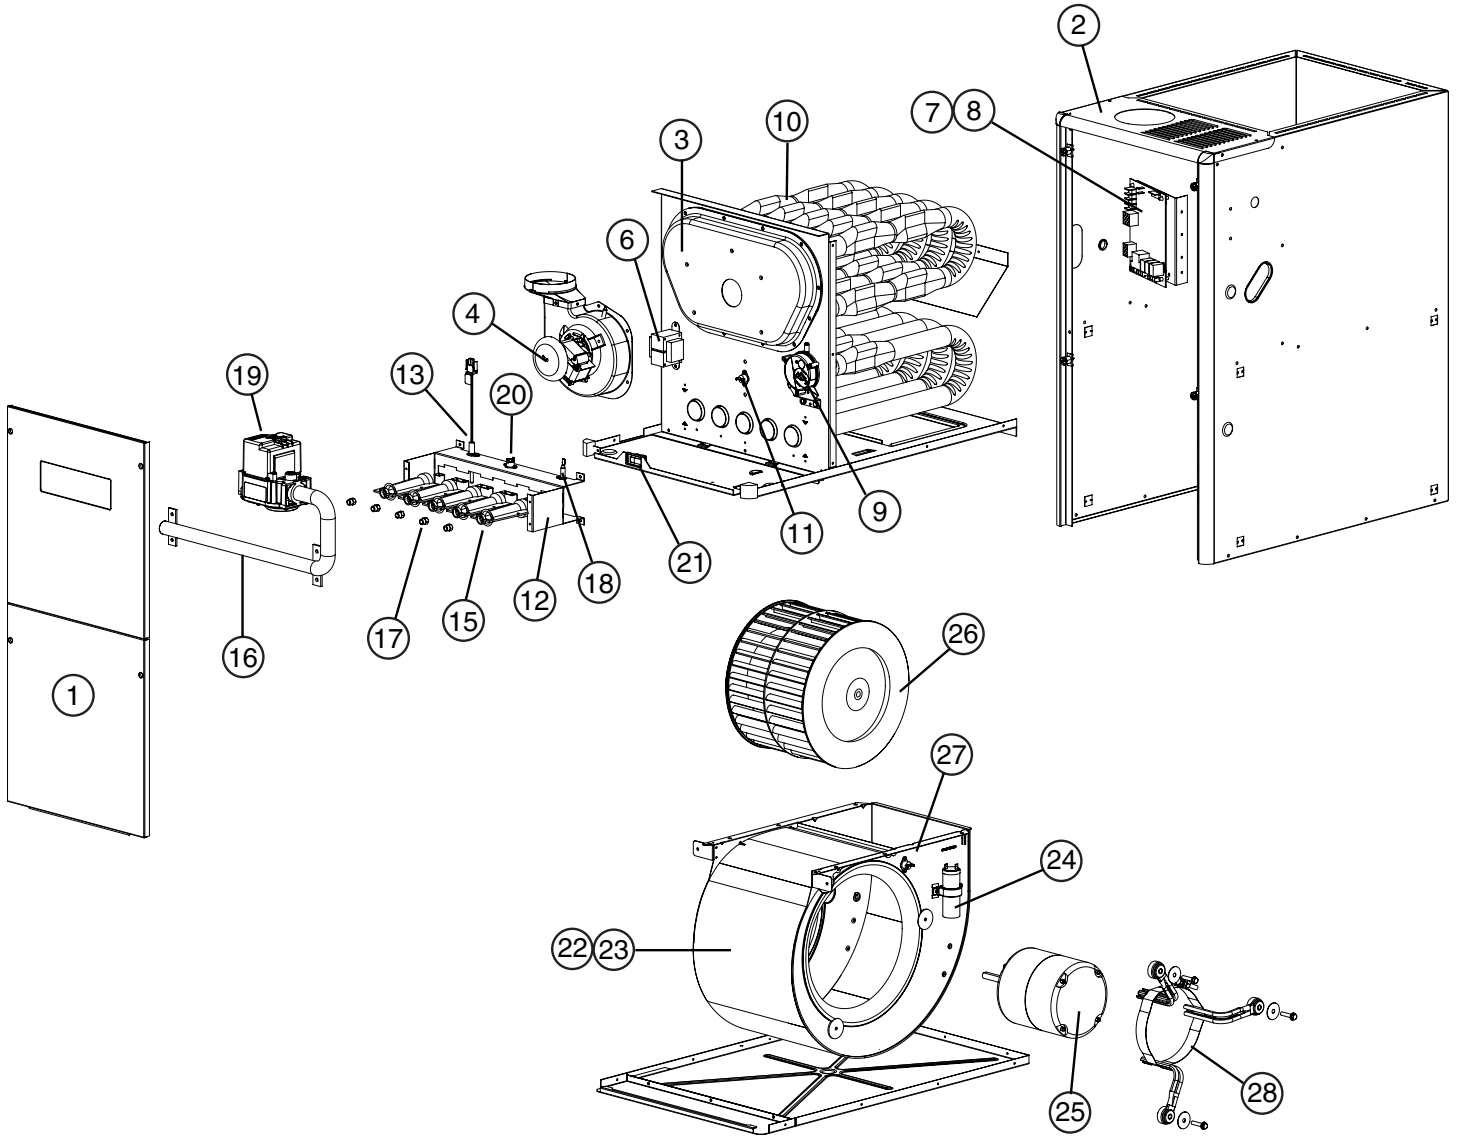

GDD80A 80+ Downflow Component Location

