


Floor Furnace

Model Numbers: 4505621A, 4515621A, 4535621A, 4555621A, 6005621A, 6015621A, 6035621A, 6055621A, 4505622A, 4515622A, 4565622A, 4555622A, 6005622A, 6015622A, 6035622A, 6055622A

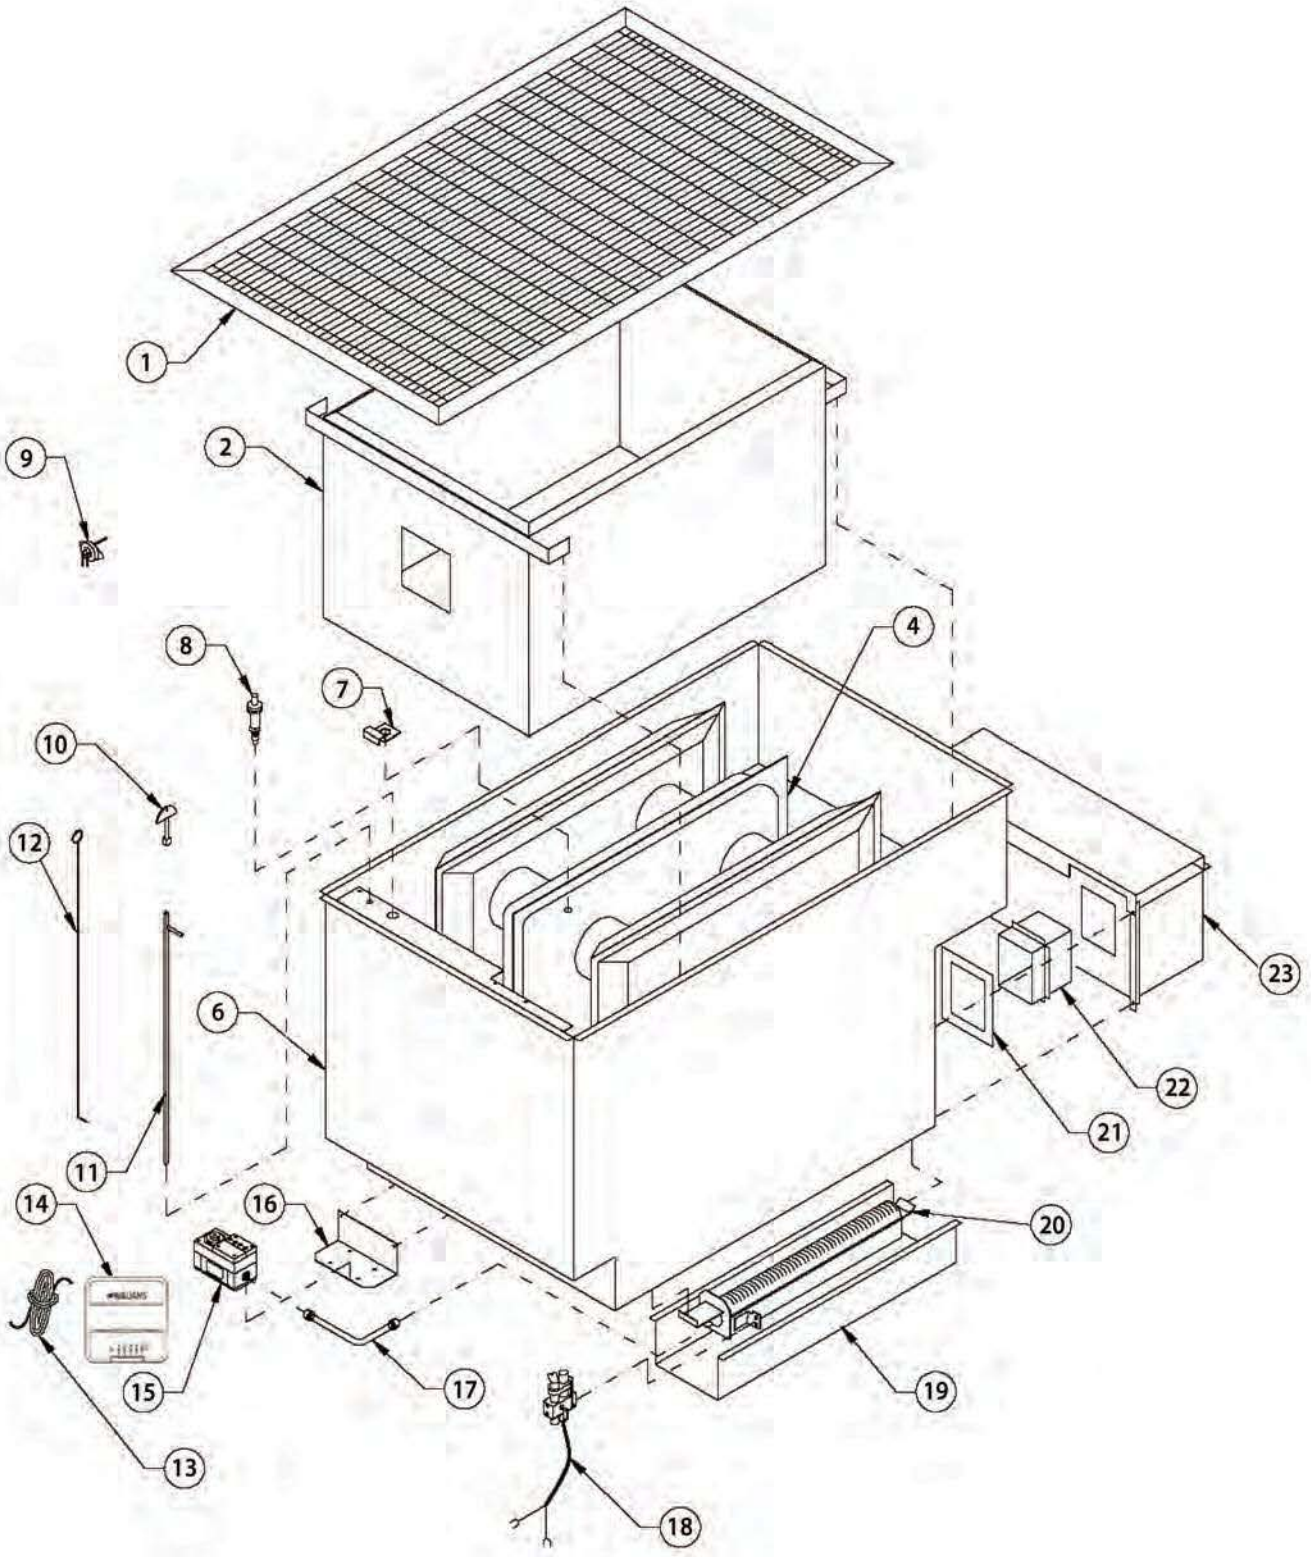

Floor Furnace

CABINET PARTS

Reference Number	Description	4505621A	4505622A	6505621A	6505622A
		4515621A	4515622A	6515621A	6515622A
		4535621A	4535622A	6535621A	6535622A
		4555621A	4555622A	6555621A	6555622A
1	Floor Grille	P322428	P322428	P322429	P322429
2	Inner Liner Assembly	4B0041	4B0041	4B0042	4B0042
4	Combustion Chamber	8964	8964	8965	8965
6	Outer Shield Assembly	4B0036	4B0036	4B0069	4B0069
7	Observation Door	12B40	12B40	12B40	12B40
**	Observation Door Gasket	P100100	P100100	P100100	P100100
8	Manual Spark Igniter	P285500	P285500	P285500	P285500
9	Limit Switch	P323031	P323031	P323031	P323031
10	Control Key	P322445	P322445	P322445	P322445
11	Control Rod	4A0037	4A0037	4A0037	4A0037
12	Lighter Rod	P322431	P322431	P322431	P322431
13	Thermostat Wire	P710000	P710000	P710000	P710000
14	Thermostat	P322016	P322016	P322016	P322016
15	Control Valve	P323178	P323177	P323178	P323177
16	Valve Bracket	4B0087	4B0087	4B0087	4B0087
17	Manifold Assembly	P323677	P323677	P323677	P323677
18	Pilot	P501618	P501617	P501618	P501617
19	Burner Shield	4B0014	4B0014	4B0010	4B0010
20	Burner	P323674	P323674	P323673	P323673
21	Flue Outlet Gasket	P322439	P322439	P322439	P322439
22	Draft Hood Collar Assembly	4B0072	4B0072	4B0072	4B0072
23	Draft Hood Assembly	4B0026	4B0026	4B0026	4B0026
**	See Burner Orifice Sizing Chart				

** Not shown